



Assembly Instructions for UTV/Truck Bracket


THANK YOU for your purchase of the Moultrie UTV/Truck Bracket. Please read this sheet before using the unit. If you should have any questions about this product or any other Moultrie product, please contact us using the information on the back of this sheet. Please register your bracket at www.moultriefeeders.com/warranty to activate your 1-year warranty.

A ASSEMBLE BRACKET

1 Attach Section A to Section B using (4) 5/16-18 grade 5 bolts and lock nuts and tighten nuts securely.

2 Attach Section B to Section C using (4) 5/16-18 grade 5 bolts and lock nuts and tighten nuts securely.

3 Insert assembled UTV/Truck Bracket into 2" receiver hitch and insert pin (not included).

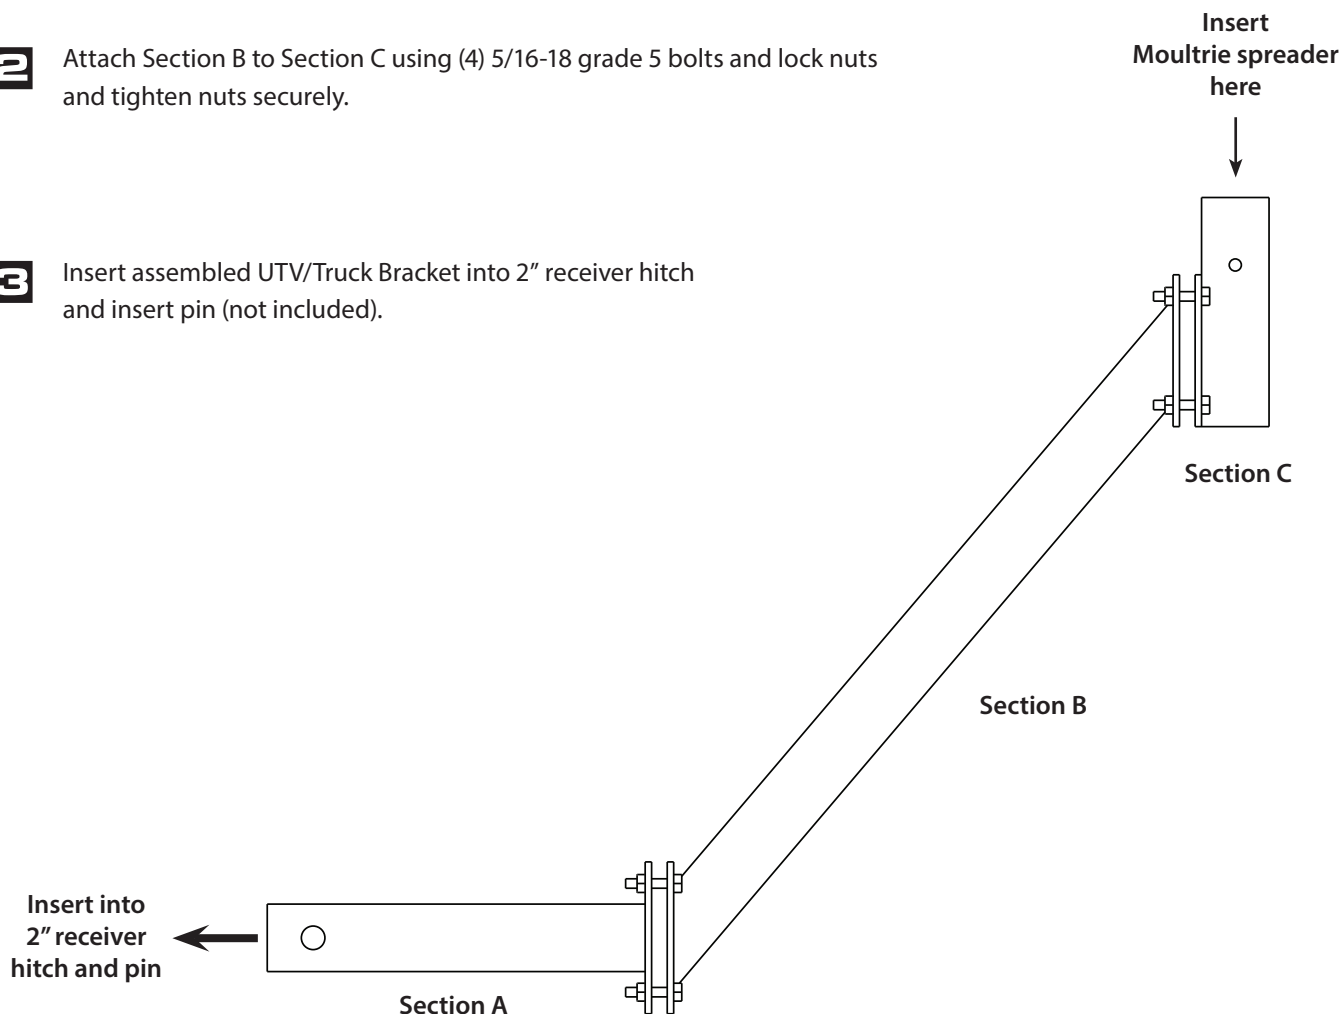

Our Service Department will gladly answer any questions you have.
Call **800-653-3334**, Monday - Friday, 8:00 AM to 5:00 PM CST.
www.moultriefeeders.com